



Installation Instructions
Part # RPP-90-500 & RPP-90-501

Step 1: Remove Broken Axle Shaft Assembly from housing.



Step 2: Securely install the aluminum oil plug into the housing. Ensure that the plug is snug and flush with the end of the housing to prevent any oil leakage from the differential



Step 3 Insert the Stub Bolt into the outer wheel bearing assembly ,from the housing side. Use a socket or wrench to secure 1 1/2" bolt head tightly.



Step 4: Use the supplied 7/8"x14 Flanged Nut on wheel side. Use 1 5/16" socket an to tighten nut. Torque the nut to 100 ft-lb to ensure secure attachment.



Note: This is for Off Highway use only .