



Installation Instructions Recovery Cap

Step 1: Remove Broken Axle Shaft Assembly from housing.



Step 2: Securely install the aluminum oil plug into the housing. Ensure that the plug is snug and flush with the end of the housing to prevent any oil leakage from the differential.



Note: This is for Off Highway use only .

www.renegadepformanceproducts.com