



Installation Instructions

Part # RPP-90-600

Step 1: Remove Broken Axle Shaft Assembly from wheel assembly.

Make sure axle splines are still in at the differential. Do not want oil to leak out.



Step 2: Insert the Stub Bolt into the outer wheel bearing assembly, from the differential side. Use a socket or wrench to secure 1 1/16" bolt head tightly.



Step 3: Use the supplied 7/8"x14 Flanged Nut on wheel side. Use 1 5/16" socket to tighten nut. Torque the nut to 100 ft-lb to ensure secure attachment.



Note: Not for Highway use .